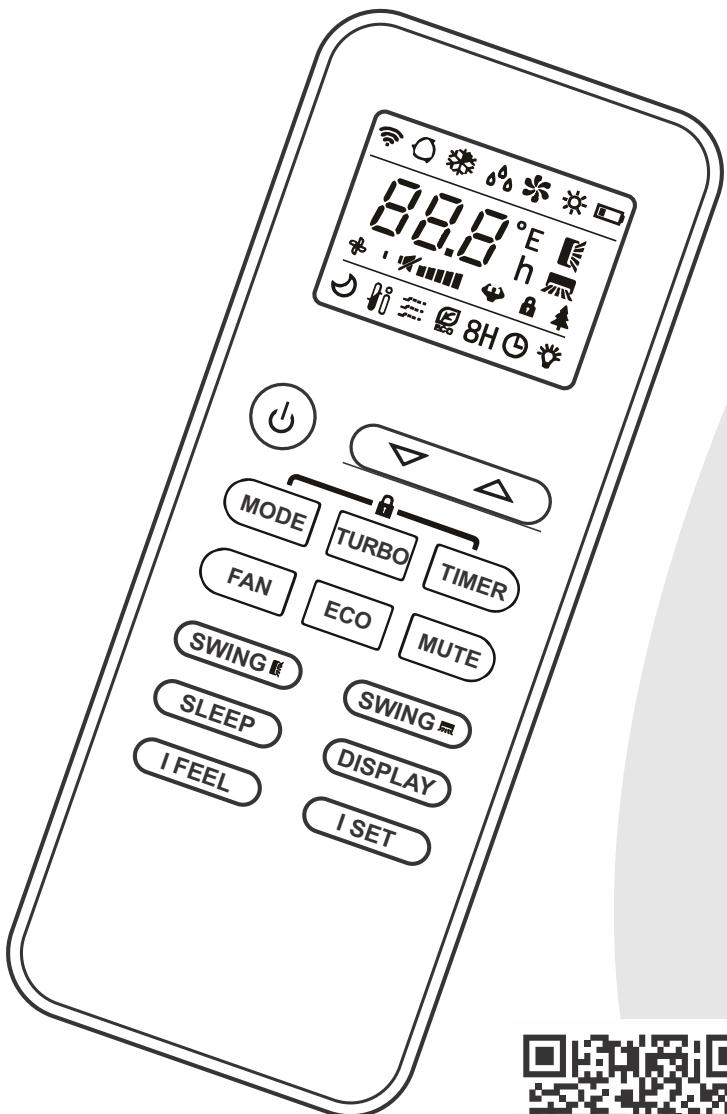


KIWP-KIWQ-KIWR-KIWE

REMOTE CONTROL MANUAL

DUCTLESS MINI SPLIT

**IMPORTANT NOTE:**

Read this manual carefully before installing or operating your new air conditioning unit. Be sure to keep this manual for future reference. For more information, please visit www.klimaire.com

Scan the QR code to visit our Help Center for installation guides, manuals, videos and more.

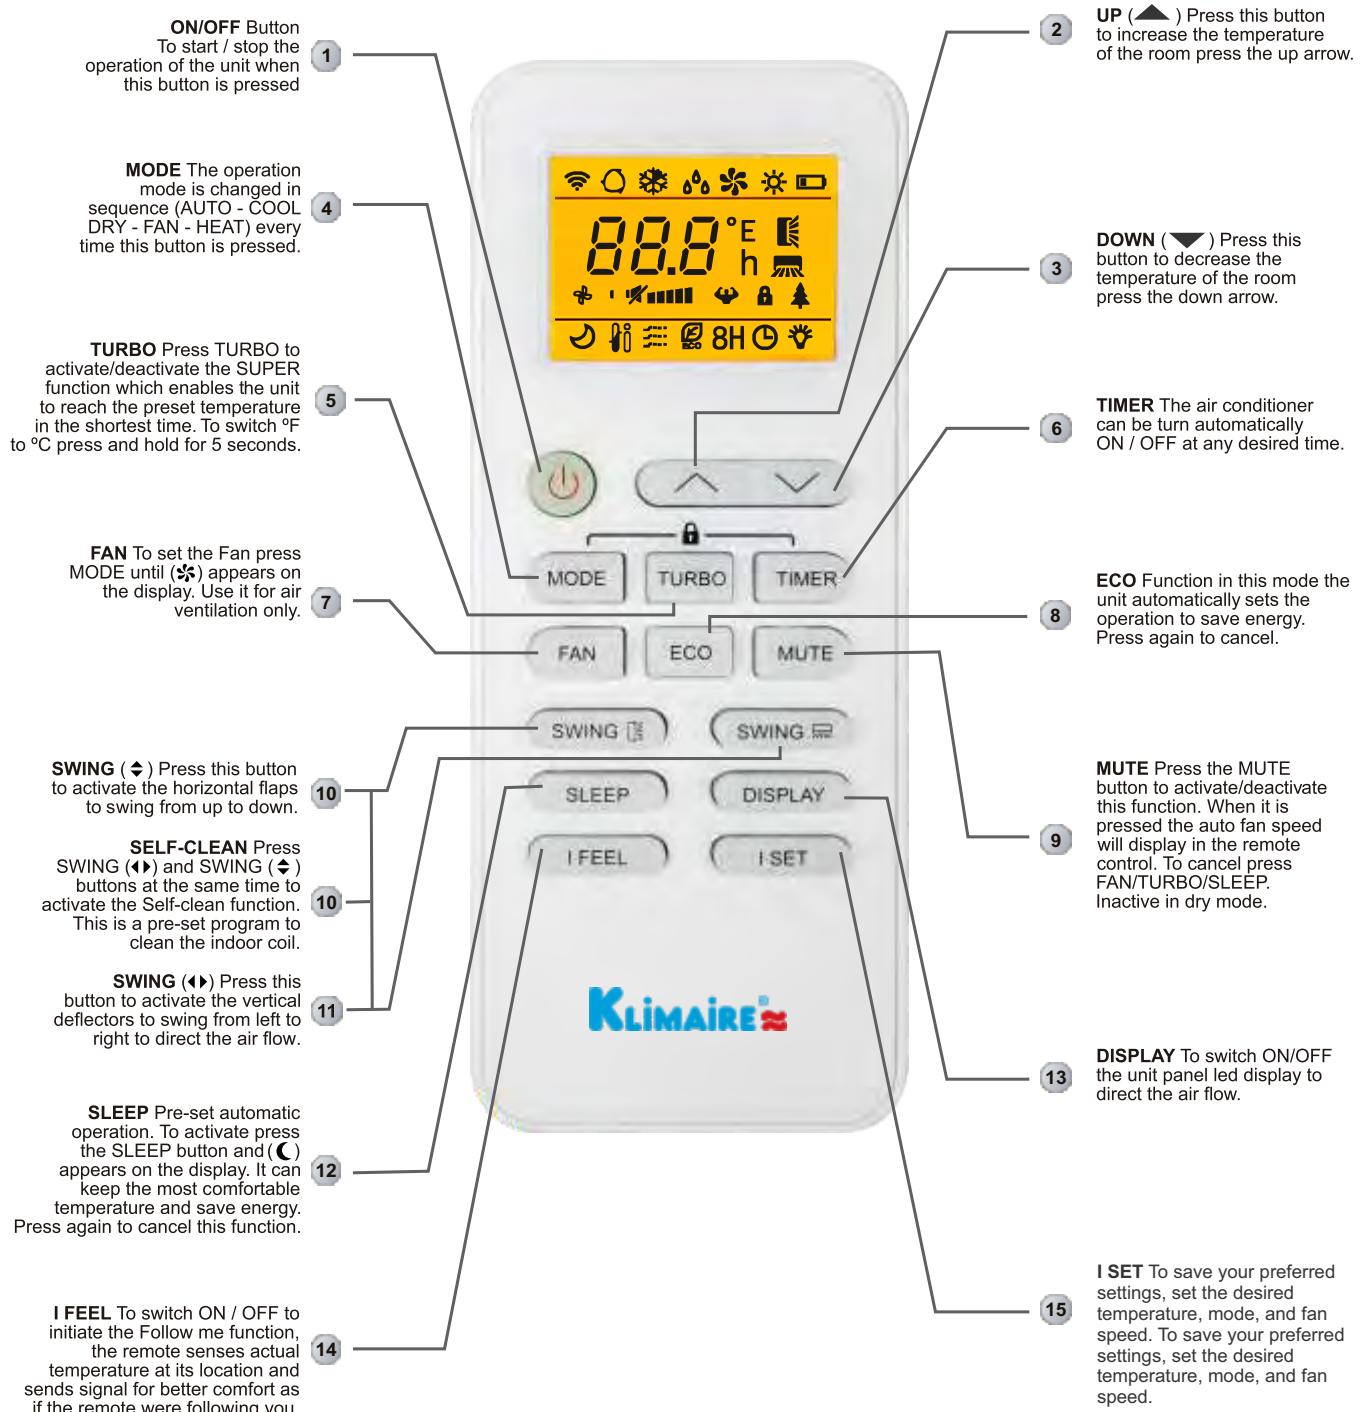


Table of Contents

1. Remote Control Button Functions	3
2. Remote Control Display Icons & Meanings.....	4
3. Remote Control Button Functions	5
4. Replacement of Batteries	6
5. Advanced Remote Control Functions	7

Remote Control Manual

1. Remote Control Button Functions



Remote Model N°: 22013-004238

⚠ The display and some functions of the remote control may vary according to the model.

⚠ The shape and position of buttons and indicators may vary according to the model, but their function is the same.


⚠ The unit confirms the correct reception of each button with a beep.

⚠ The display and some functions of the remote control may vary according to the model.

Remote Control Manual

2. Remote Control Display Icons & Meanings

No.	Symbols	Meaning
1		Battery indicator
2		Auto Mode
3		Cooling Mode
4		Dry Mode
5		Fan only Mode
6		Heating Mode
7		ECO Mode
8		Timer
9		Temperature indicator
10		Fan speed: Auto/ low/ low-mid/ mid/ mid-high/ high
11		Mute function
12		TURBO function
13		Up-down auto swing
14		Left-right auto swing
15		SLEEP function
16		I FEEL function
17		46° F heating function
18		Signal indicator
19		Child-Lock
20		Display ON/OFF

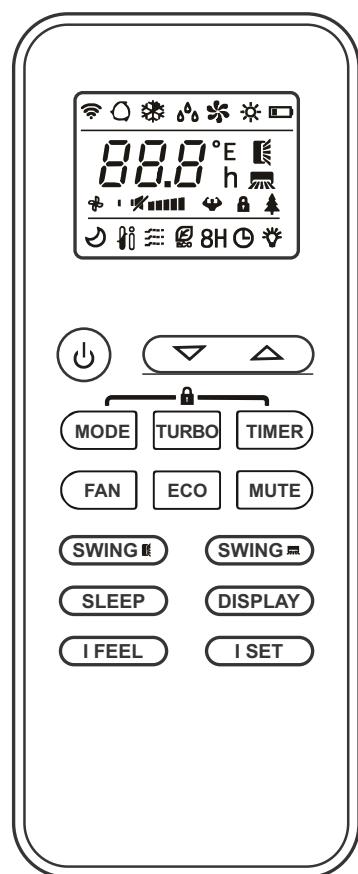

Operational Instructions

3. Remote Control Button Functions

No.	Button	Function
1		To turn on/off the air conditioner .
2	^	To increase temperature, or Timer setting hours.
3	▼	To decrease temperature, or Timer setting hours.
4	MODE	To select the mode of operation (AUTO, COOL, DRY, FAN, HEAT).
5	ECO	To activate/deactivate the ECO function.
		Long press to activate/deactivate the 8°C heating function (depending on models).
6	TURBO	To activate/deactivate the TURBO function.
7	FAN	To select the fan speed of auto/low/mid/high.
8	TIMER	To set the time for timer on/off.
9	SLEEP	To switch-on/off the function SLEEP.
10	DISPLAY	To switch-on/off the LED display.
11	SWING ⏪	To stop or start horizontal flaps louver movement or set the desired up/down air flow direction.
12	SWING ⏫	To stop or start vertical deflectors louver movement or set the desired left/right air flow direction.
13	I FEEL	To switch-on/off the I FEEL function.
14	MUTE	To switch-on/off the MUTE function.
		Long press to activate/deactivate the GEN function (depending on models).
15	MODE + TIMER	To activate/deactivate the CHILD-LOCK function.
16	SWING ⏪ + SWING ⏫	To activate/deactivate the SELF-CLEAN function (depending on models).
17	I SET	To memory the setting temperature, setting mode and setting fan speed as you need.

 The display and some functions of the remote control may vary according to the model.

 The shape and position of buttons and indicators may vary according to the model, but their function is the same.

 The unit confirms the correct reception of each button with the beep.

Operational Instructions

4. Replacement of Batteries

Remove the battery cover plate from the rear of the remote control, by sliding it in direction as the arrow.

Install the batteries according the direction (+ and -)shown on the Remote Control.

Reinstall the battery cover by sliding it into place.


⚠ Use 2 pieces LRO3 AAA (1.5V) batteries.

Do not use rechargeable batteries.

Replace the old batteries with new ones of the same type when the display is no longer legible.

Do not dispose batteries as unsorted municipal waste.

Collection of such waste separately for special treatment is necessary.

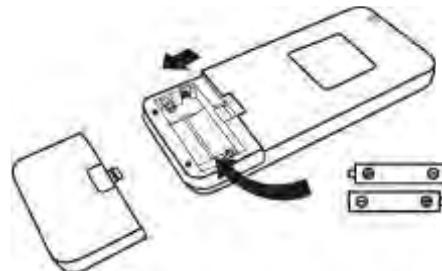

⚠ For some models, each time when insert the batteries in the remote controller for the first time, you can set the Cooling only or Heating pump control type. As soon as you insert the batteries, turn off the remote controller, and operate as below.

1. Long press the [MODE] button, until the (※) icon flash, to set the Cooling only type.
2. Long press the [MODE] button, until the (⌚) icon flash, to set the Heating pump type.

Note: If you set the remote control in cooling mode, it will not be possible to activate the heating function in units with a heating pump. If you need to reset, take out the batteries and install again.

⚠ For some models of the remote controller, you can program the temperature display between °C and °F.

1. Press and hold the [TURBO] button over 5 seconds to get into the change mode;
2. Press and hold the [TURBO] button, until it switch to °C and °F;
3. Then release the pressing and wait for 5 seconds, the function will be selected.

Note:

1. Direct the remote control toward the Air conditioner.
2. Check that there are no objects between the remote control and the Signal receptor in the indoor unit.
3. Never leave the remote control exposed to the rays of the sun.
4. Keep the remote control at a distance of at least 1m from the television or other electrical appliances.

Operational Instructions

5. Advanced Remote Control Functions

COOLING MODE



The cooling function allows the air conditioner to cool the room and reduce Air humidity at the same time.

To activate the cooling function (COOL), press the **[MODE]** button until the symbol  appears on the display.

With the button  or  set a temperature lower than that of the room.

FAN MODE (Not FAN button)



Fan mode, air ventilation only.

To set the FAN mode, press **[MODE]** until  appears on the display.

DRY MODE



This function reduces the humidity of the air to make the room more comfortable.

To set the DRY mode, Press **[MODE]** until  appears in the display. An automatic function of pre-setting is activated.

AUTO MODE



Automatic mode.

To set the AUTO mode, press **[MODE]** until  appears on the display.

In AUTO mode the run mode will be set automatically according to the room temperature.

HEATING MODE



The heating function allows the air conditioner to heat the room.

To activate the heating function (HEAT), press the **[MODE]** button until the symbol  appears on the display.

With the button  or  set a temperature higher than that of the room.

 In HEATING operation, the appliance can automatically activate a defrost cycle, which is essential to clean the frost on the condenser so as to recover its heat exchange function. This procedure usually lasts for 2-10 minutes. During defrosting, indoor unit fan stop operation. After defrosting, it resumes to HEATING mode automatically.

(For North American market)

If necessary, you can press ECO button 10 times within 8 seconds under heating mode to start the forced defrosting. It will defrost the outdoor ice much faster.

FAN SPEED function (FAN button)



Change the operating fan speed.

Press **[FAN]** button to set the running fan speed, it can be set to AUTO/ MUTE/ LOW/ LOW-MID / MID/ MID-HIGH/ HIGH/ TURBO speed circularly.



Child-Lock function

1. Long press **[MODE]** and **[TIMER]** button together to active this function, and do it again to deactivate this function.
2. Under this function, no single button will active.

Operational Instructions

TIMER function ---- TIMER ON



To automatically switch on the appliance.

When the unit is switch-off, you can set the TIMER ON.

To set the time of automatic switch-on as below:

1. Press **TIMER** button first time to set the switch-on, and will appear on the remote display and flashes.
2. Press \wedge or \vee button to set desired Timer-on time. Each time you press the button, the time increases/decreases by half an hour between 0 and 10 hours and by one between 10 and 24 hours.
3. Press **TIMER** button second time to confirm.
4. After Timer-on setting, set the needed mode (Cool/ Heat/ Auto/ Fan/ Dry), by press the **MODE** button. And set the needed fan speed, by press **FAN** button. And press \wedge or \vee to set the needed operation temperature.

CANCEL it by press **TIMER** button.

TIMER function ---- TIMER OFF



To automatically switch off the appliance.

When the unit is switch-on, you can set the TIMER OFF.

To set the time of automatic switch-off, as below:

1. Confirm the appliance is ON.
2. Press the **TIMER** button at first time to set the switch-off. Press \wedge or \vee to set the needed timer.
3. Press **TIMER** button at the second time to confirm.

CANCEL it by press **TIMER** button.

Note: All programming should be operated within 5 seconds, otherwise the setting will be cancelled.

SWING function



1. Press the button **SWING** to activate the louver,

- 1.1 Press to activate the horizontal flaps to swing from up to down, the will appear on the remote display.

Press again to stop the swing movement at the current angle.

- 1.2 Press to activate the vertical deflectors to swing from left to right, the will appear on the remote display.


Press again to stop the swing movement at the current angle.

2. If the vertical deflectors are positioned manually which placed under the flaps, they allow to move the air flow direct to rightward or leftward.
3. For some inverter heating models, press horizontal SWING and vertical SWING together button at the same time, it will activate the Self-Clean function.

This adjustment must be done while the appliance is switched off.

Never position "Flaps" manually, the delicate mechanism might get seriously damaged!

Never put fingers, sticks or other objects into the air inlet or outlet vents. Such accidental contact with live parts might cause unforeseeable damage or injury.

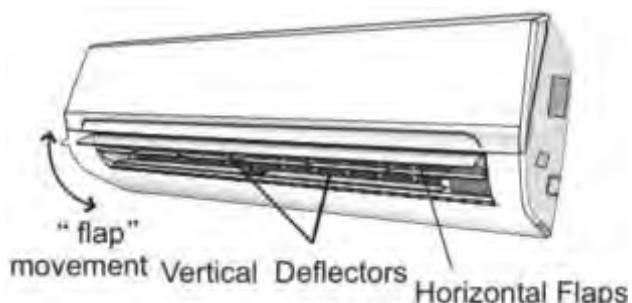

TURBO function



To activate turbo function, press the **TURBO** button, and will appear on the display.

Press again to cancel this function.

In COOL/ HEAT mode, when you select TURBO feature, the appliance will turn to quick COOL or quick HEAT mode, and operate the highest fan speed to blow strong airflow.

Operational Instructions

MUTE function



1. Press **MUTE** button to active this function, and  will appears on the remote display. Do it again to deactivate this function.
2. When the MUTE function runs, the remote controller will display the auto fan speed, and the indoor unit will operate at lowest fan speed to help experience a quiet feeling.
3. When press FAN/ TURBO button, the MUTE function will be cancel. MUTE function can not be activated under dry mode.

SLEEP function



Pre-setting automatic operating program.

Press **SLEEP** button to activate the SLEEP function, and  appears on the display. Press again to cancel this function.

After 10 hours running in sleep mode, the air conditioner will change to the previously set mode.

I FEEL function



Press **I FEEL** button to active the function, the  will appear on the remote display. Do it again to deactivate this function.

This function enables the remote control to measure the temperature at its current location, and send this signal to the air conditioner to optimize the temperature around you and ensure the comfort.

It will automatically deactivate 8 hours later.

ECO function



In this mode the appliance automatically sets the operation to save energy.

Press the **ECO** button, the  appears on the display, and the appliance will run in ECO mode. Press again to cancel it.

Note: The ECO function is available in both COOLING and HEATING modes.

DISPLAY function (Indoor display)



Switch ON/OFF the LED display on panel.

Press **DISPLAY** button to switch off the LED display on the panel. Press again to switch on the LED display.

Generator Mode (GEN Mode) Function

Activation & Deactivation

1. Turn on the indoor unit first.
2. Press and hold the MUTE button for 3 seconds to activate Generator Mode.
3. Press and hold the MUTE button again for 3 seconds to deactivate the function.

Selecting Generator Mode Levels

1. While GEN Mode is active, **short-press the MUTE button** to toggle through the available levels in sequence:
2. **L3 → L2 → L1 → OF (Off)**
3. To exit GEN Mode, select **OF**, then wait 2 seconds.

Function Description

- GEN Mode is supported in **Cooling, Heating, Dehumidification, Fan**, and Auto modes.
- When activated, the system enters a **generator-friendly power-saving mode** with the following behaviors:
 - a. **Four current-limit levels:** Off, LV1, LV2, LV3.
 - b. The indoor display shows the **maximum allowable current** (e.g., "8A") for the selected level for 5 seconds.
 - c. The outdoor unit **limits compressor current** so it does not exceed the chosen level.

Operational Instructions

Important Note

- If the indoor unit displays "0A", use the remote control to **increase the GEN Mode level**.
- After changing the level, the compressor will automatically **restart after a 3-minute protection delay**.

Returning to Normal Operation

- When GEN Mode is turned off, the air conditioner **resumes normal performance** without current restrictions.

SELF-CLEAN function

To active this function, turn off the indoor unit at first, then press **SWING** and **↔** button at the same time toward the indoor unit, until hear a beep, and **AC** will appear on the remote controller display and the indoor LED display.

1. This function helps carry away the accumulated dirt, bacteria, etc from the indoor evaporator.
2. This function will run about 30 minutes, and it will return to the pre-setting mode. You can press **○** button to cancel this function during the process.

You will hear 2 beeps when it's finished or cancelled.

⚠ It's normal if there is some noise during this function process, as plastic materials expand with heat and contract with cold.

⚠ We suggest operating this function at the following ambient conditions to avoid certain safety protection features.

Indoor unit Temp < 86°F (30°C)
Outdoor unit 41°F (5°C) < Temp < 86°F (30°C)

⚠ It's suggested to utilize this function every 3 months.

46° F heating function - Away Home

Activates/Disables To avoid freezing of the home when you are away during colder months keeping at 46 ° F in heating mode

1. Long press **ECO** button over 3 seconds to active this function, and **[8°C] ([46°F])** will appear on the remote display.
2. Do it again to deactivate this function. This function will auto start the heating mode when the room temperature is lower than 8°C (46°F), and it will return to standby if the temperature reaches 9°C (48°F).
3. If the room temperature is higher than 18°C (64°F), the appliance will cancel this function automatically.

I SET function

Remember your favorite setting and run into it by press One button

Remember the favorite setting:

1. In each mode (COOLING/ HEATING/ FAN/ DRY), long press " I SET " button over 3 seconds to remember it;
2. When "AU" flashing appears on the remote controller display, that means the remote controller remember your favorite setting;
* Press any button to quit, and you can reset it by repeat 1, 2 operation.

Run into the favorite setting:

1. In each mode (COOLING/ HEATING/ FAN/ DRY), one press " I SET " button to active;
2. The appliance will run as your favorite setting and you will see **[AU]** flashing on the remote controller;
3. Press it again or other buttons to cancel this function.

KlimaireTM

Mark of Superior Quality

7999 NW 81 Place Miami, FL 33195
Klimaire Products Inc.

Tel: (305) 593 - 8358
E-mail: info@klimaire.com
Website: www.klimaire.com

Klimaire parts and supplies are available online at: www.klimaire.com



Scan the QR code
to visit our Help Center
for installation guides,
manuals, videos and more.



The Klimaire logo is a registered Trademark of Klimaire Products Inc.
Copyright 2025 Klimaire Products Inc.

The design, features, and specifications of this product are subject to change without prior notice as part of Klimaire's ongoing commitment to innovation and product improvement. For the most up-to-date technical information, installation guidance, and certified performance data, consult your authorized Klimaire distributor or visit our Help Center. Always refer to the unit's nameplate and accompanying documentation for model-specific requirements.