




Total Command

The new easy-to-use Klimate-Carrier remote control is carefully designed as the rest of the system to ensure perfect control of all the functions. Frequently used buttons are placed at the top, while feature buttons are laid out in user-friendly zones. The One Touch My Comfort features customized temperature and airflow settings, which will deliver you ultimate comfort with one simple push of the button. When you activate the Comfort Sleep feature, your air-conditioning system will compensate for naturally lower night air temperatures so you can sleep in complete comfort.

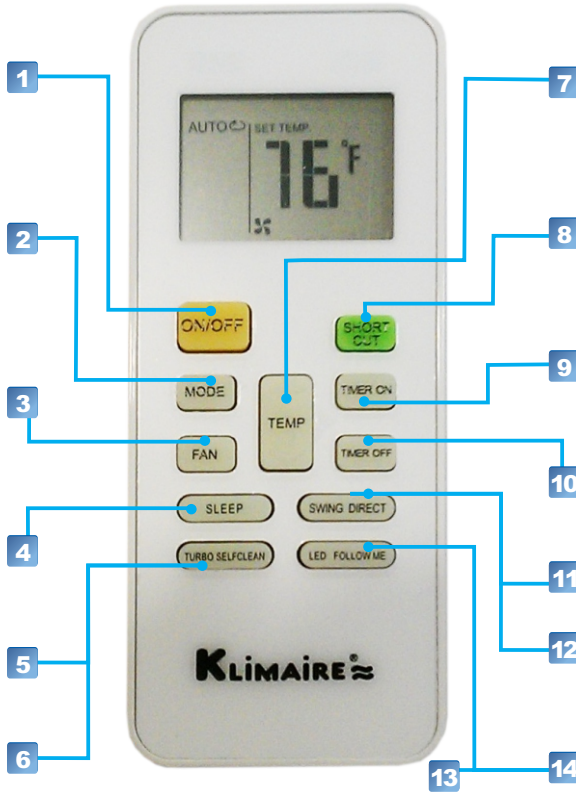


 
1  **ON/OFF Button**
Operation starts when this button is pressed and stops when this button is pressed again.


2  **MODE Button**
Each time the button is pressed, the operation mode is selected in a sequence of following:





NOTE: Please do not select HEAT mode if the machine you purchased is cooling only type. Heat mode is not supported by 0 the cooling only appliance.


3  **FAN Button**
Used to select the fan speed in four steps: r





4  **SLEEP Button**
Active/Disable sleep function. It can maintain the most comfortable temperature and save energy. This function is available on COOL, HEAT or AUTO mode only.
NOTE: While the unit is running under SLEEP mode, it would be cancelled if MODE, FAN SPEED or ON/OFF button is pressed.


5  **TURBO Button**
Active/Disable Turbo function. Turbo function enables the unit to reach the preset temperature at cooling or heating operation in the shortest time (if the indoor unit does not support this function, there is no corresponding operation happened when pressing this button.)


6  **SELF CLEAN Button**
Active/Disable Self Clean function. Under self clean mode, the air conditioner will automatically clean and dry the evaporator and keep it as fresh for the next operation.


7  **UP Button (^)**
Push this button to increase the indoor temperature setting in 1°F increments to 86°F.


7  **DOWN Button (v)**
Push this button to decrease the indoor temperature setting in 1°F increments to 62°F.
NOTE: Press and hold and buttons together for 3 seconds will alternate the temperature display between the °C & °F scale.


8  **SHORTCUT Button**
Used to restore the current settings or resume previous settings. On the first time connecting to the power, if push the SHORTCUT button, the unit will operate on AUTO mode, 80°F, and fan, speed is Auto.
• Push this button when remote controller is on, the system will automatically revert back to the previous settings including operating mode, setting temperature, fan speed level and sleep feature (if activated). And transmit the signals to the unit.
• If push this button when remote controller is off, the system will only resume the previous settings and will not transmit the signals to the unit. And the sleep feature is disable.
• If pushing more than 2 seconds, the system will automatically restore the current operation settings including operating mode, setting temperature, fan speed level and sleep feature (if activated).


9  **TIMER ON**
Button Press this button to initiate the auto-on time sequence. Each press will increase the auto-timed setting in 30 minutes increments. When the setting time displays 10, each press will increase the auto-timed setting 60 minutes increments. To cancel the auto-timed program, simply adjust the auto-on time to 0.0.

10  **TIMER OFF Button**
Press this button to initiate the auto-off time sequence. Each press will increase the auto-timed setting in 30 minutes increments. When the setting time displays 10, each press will increase the auto-timed setting 60 minutes increments. To cancel the auto-timed program, simply adjust the auto-off time to 0.0

11  **DIRECT Button**
Used to change the louver movement and set 0 the desired up/down air flow direction. The louver changes 6° in angle for each press.

12  **SWING Button**
Used to stop or start horizontal louver auto swing feature.

13  **FOLLOW ME Button**
Push this button to initiate the Follow Me feature, the remote display is actual temperature at its location. The remote control will send this signal to the air conditioner every 3 minutes interval until press the Follow Me button again. The air conditioner will cancel the Follow Me feature automatically if it does not receive the signal during any 7 minutes interval.

14  **LED Button**
Disable/Active indoor screen Display. When pushing the button, the indoor screen display is cleared, press it again to light the display.